



# **Technical Data Sheet**

Pressure / Temperature / Humidity / Air Velocity / Airflow / Sound level

#### CE Flush-mount multifunction pressure transmitter 0 0 **CPE 310-S KEY POINTS** Adjusting - Measuring Ranges ERTIFICAT CPE 310-S : from -100 to +100 Pa CPE 311-S : from -1000 to +1000 Pa - Input for interchangeable probe (Class 310) - Alternating display of 1 to 3 parameters - Front face calibration - Configurable intermediate and centre zero ranges - 3 audible and visual alarms - Front face keypad allowing to configure the transmitter and acknowledge the alarm - 3 analogue outputs 0-5/10 V or 0/4-20 mA - High resolution in pressure on model -100/+100 Pa (ex : 0.1 Pa) (optional) - Outputs diagnostic - MODBUS network RS485 system (optional) 0 0 - Front face made of brushed stainless steel with electroluminescent display

### FEATURES OF THE HOUSING

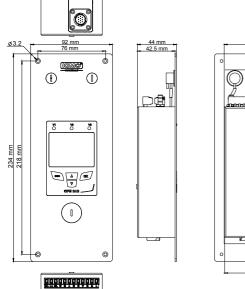

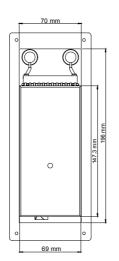

Front face : Brushed stainless steel 316 L

Back housing : Flush-mount in stainless steel 304 L

Protection : IP65 in front face

Display : Electroluminescent alphanumeric (38 x 48 mm) Protection screen made of inactinic red PMMA

Height of the digits : 14 mm

Back fittings : Barbed fitting Ø 5.2 mm

Weight : 640 g

### TECHNICAL FEATURES IN PRESSURE

<u>@</u>

| Measuring range      | CPE 310- S : from -100 to +100 Pa<br>CPE 311-S : from -1000 to +1000 Pa           |  |
|----------------------|---|--|
| Measurement units    | Pa, mmH <sub>2</sub> O, mbar, inWG, mmHG, daPa, hPa                               |  |
| Accuracy*            | CPE 310-S : ±0.2% of reading ±0.8 Pa<br>CPE 311-S : ±0.2% of reading ±2 Pa        |  |
| Zero drift           | None (see "Self-calibration")   |  |
| Resolution           | 1 Pa, 0.1 mmH <sub>2</sub> O, 0.01 mbar, 0.01 inWG, 0.01 mmHG, 0.1 daPa, 0.01 hPa |  |
| Auto-calibration     | Manual or automatic (configurable)  |  |
| Allowed overpressure | 25 000 Pa   |  |
| Response time        | 1/e (63%) 0.3 s   |  |
| Type of fluid        | Air and neutral gases   |  |

\*All accuracies indicated in this document were stated in laboratory conditions and can be guaranteed for measurements carried out in the same conditions, or carried out with calibration compensation.

## TECHNICAL SPECIFICATIONS

| TECHNICAL SPECIFICATIONS      |  |  |
|-------------------------------|--|--|
| Power supply                  | 24 Vac / Vdc ±10 %   |  |
| Output                        | 3 x 0/4-20 mA or 3 x 0-5/10 V (4 wires)<br>Common mode voltage<br>Maximum load : 500 Ohms (0/4-20 mA) / Minimum load : 1 K Ohms (0-5/10 V) |  |
| Galvanic isolation            | On the output  |  |
| Consumption                   | 5 VA   |  |
| Conformity                    | 2004/108/EC EMC ; 2006/95/EC Low Voltage ; 2011/65/EU RoHS II ; 2012/19/EU WEEE  |  |
| Electrical connection         | Screw terminal block for cables from 0.05 to 1.5 mm <sup>2</sup> or from 30 to 16 AWG Carried out according to the code of good practice.  |  |
| RS485 communication           | Digital : Modbus RTU protocol, configurable communication speed from 2400 to 115200 Bauds (optional)                                       |  |
| Visual alarm                  | Blinking of the value  |  |
| Audible alarm                 | Buzzer (70 dB at 10 cm)  |  |
| Environment and type of fluid | Air and neutral gases  |  |
| Conditions of use (°C/%RH/m)  | From -10 to +50 °C. In non-condensing condition. From 0 to 2000 m  |  |
| Storage temperature           | From -10 to +70 °C   |  |

# SELF-CALIBRATION

Class 310 transmitters have a temperature compensation system from 0 to 50°C and a self-calibration system to guarantee an excellent long-term stability, along with a great measurement accuracy.

Self-calibration principle : the microprocessor of the transmitter drives a solenoid valve that compensates any long-term drifts of the sensitive element. The compensation is made by regular adjustment of the zero. The differential pressure measurement is then made regardless of the environmental conditions of the transmitter. **Solenoid valve lifetime :** 100 million cycles


Advantage : no zero drift

Self-calibration frequency : can be disabled or set from 1 to 60 min

INNOVATIONS

#### > Adjustable pressure connections

The CPE310-S and CPE 311-S transmitter have a **two adjustable pressure connections system** in front face (A) coupled with two pressure connections at the back (B). When installing the transmitter, this system allows to configure the differential pressure connections with a set of plugs (supplied with the transmitter).

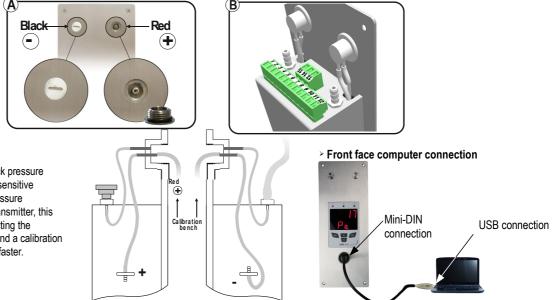


# > Front face calibration

This system allows to isolate the back pressure connections and then to access the sensitive element (on the front face) of the pressure transmitter. Without dismantle the transmitter, this system allows to calibrate by connecting the transmitter to a pressure generator and a calibration bench. The calibration is easier and faster.

#### CONFIGURABLE ANALOGUE OUTPUTS

#### Configurable analogue outputs :

Range with centre zero (-50/0/+50 Pa), with offset zero (-30/0/+70 Pa) or standard range (0/+100 Pa), it is possible to configure your own intermediate ranges. The minimum configurable range is 10% of the full scale.

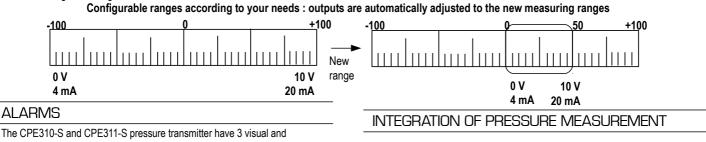

audible alarms that are independent and configurable. Available settings are the followings :

- Time-delay duration : from 0 to 600 s
- Thresholds values
- Action of the alarm : rising edge, falling edge or monitoring
- Audible alarm activation (buzzer)


The pressure measurement element is very sensitive and reacts to pressure changes. When making measurements in unstable air movement conditions, the pressure measurement may fluctuate. The integration coefficient (from 0 to 9) makes an average of the measurements ; this helps to avoid any excessive variations and guarantees a stable measurement.

# POSSIBLE OPTIONAL MEASUREMENTS


The following probes and boards are available as option for C310 transmitters. For further details please see the technical datasheet of probes for class 310 transmitters.

| Probes  | Measuring ranges  |
|---|---|
| Stainless steel or polycarbonate hygrometry / temperature probe   | From 0 to 100%RH and from -40 to +180 °C (according to probe)                       |
| Air velocity vane probe : air velocity / temperature / airflow    | From -5 to 35 m/s (according to probe) / From -20 to +80 °C / From 0 to 99 999 m³/h |
| Air velocity hotwire probe : air velocity / temperature / airflow | From 0 to 30 m/s / From -20 to +80 °C / from 0 to 99 999 m³/h                       |
| Omnidirectional probe : air velocity / temperature                | From 0 to 5 m/s and from 0 to 50 °C   |
| Pt100 1/3 DIN temperature probe                                   | From -50 to +180 °C / From -20 to +80 *C  |
| CO / temperature probe  | From 0 to 500 ppm and from 0 to 50 °C   |
| CO <sub>2</sub> / temperature probe                               | From 0 to 20 000 ppm and from 0 to 50 °C  |

#### CONENCTIONS

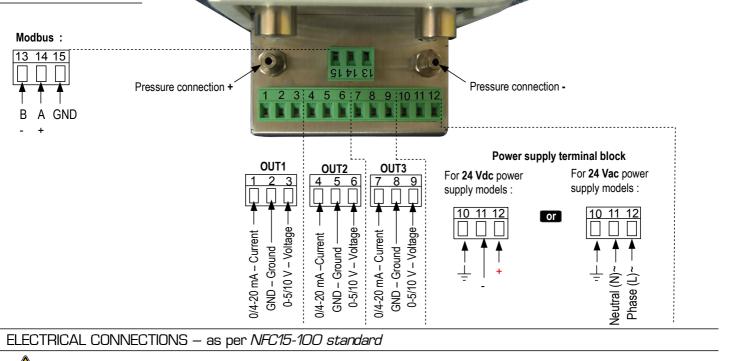

This connection must be made by a qualified technician. To make the connection, the transmitter must not be energized.

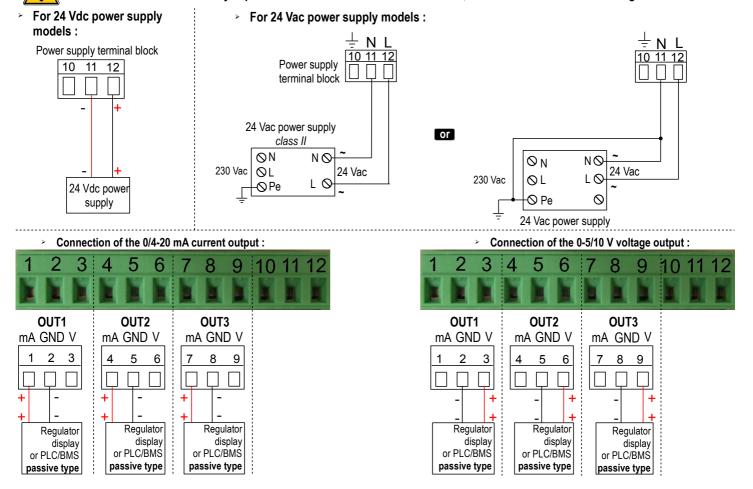

# **RS 485 MODBUS PROTOCOL**

Class 310 transmitters can be linked in one network operating on a RS485 home bus.

The RS 485 digital communication is a 2-wire network, on which the transmitters are connected in parallel. They are connected to a PLC/BMS via the RTU Modbus communication system. Since the CPE310-S and CPE 311-S can be configured with the keypad, the MODBUS enables remote configuration, to measure 1 or 2 parameters or to see the status of the alarms...

### INPUT FOR CLASS 310 INTERCHANGEABLE PROBES

The input for interchangeable probes allows to connect directly on CPE 310-S or CPE 311-S transmitter, via the adaptor cable, an interchangeable probe of the class 310 range (see technical datasheet of probes for class310 transmitters).

Advantage : the CPE 310-S and CPE 311-S centralise, in addition of the pressure, temperature and humidity measurements of a SHDI150 probe for example.



## CONFIGURATION

Class 310 transmitters allows you to set all the parameters managed by the transmitter : units, measuring ranges, alarms, outputs, channels... via the different methods shown below :

- Via keypad, only on models with display. A code-locking system for keypad guarantees the security of the installation. See configuration manual.
- Via software (optional) : simple and user-friendly. See LCC-S user manual.
- Via Modbus (optional) : configuration of all parameters from your PC, via the supervision or data acquisition software.


### MOUNTING

To install a transmitter on a wall, make a cutting of 196 x 70 mm in the wall. Then drill 4 holes around the cutting as shown beside. Insert the transmitter into the wall and fix it with the 4 screws (supplied with the transmitter).

### CALIBRATION

Outputs diagnostics : with this function, you can check with a multimeter (or on a regulator/display, or on a PLC/BMS) if the transmitter outputs work properly. The transmitter generates a voltage of 0 V, 5 V and 10 V or a current of 0 mA, 4 mA, 12 mA and 20 mA

Certificate : transmitters are supplied with an individual adjusting certificate and can be supplied with a calibration certificate as an option.

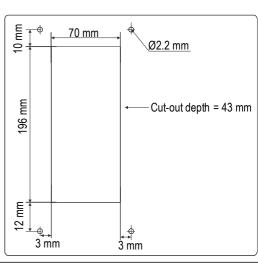

-Tan\_CPE310-S-CPE311-S -11/08/15 - RCS (24) Perigueux 349 282 095 Non-contractual document - We reserve the right to modify the characteristics of our products without prior notice

### MAINTENANCE

Avoid aggressive solvents. When cleaning rooms or ducts with products containing formol, protect the the transmitter.

#### **OPTIONS**

- LCC-S : configuration software with USB cable
- RS5 : RS 485 Protocol Modbus digital output
- HRP : high resolution (example in pressure : 0.1 Pa) for CPE 310-S
- Calibration certificate

- Sliding fittings
- Connection fitting
- Clear tube
- Pressure connections
- Trough-connections

Only the accessories supplied with the device must be used.

### PRECAUTIONS FOR USE

Please always use the device in accordance with its intended use and within parameters described in the technical features in order not to compromise the protection ensured by the device.



Once returned to KIMO, required waste collection will be assured in the respect of the environment in accordance with European guidelines relating to WEEE.

### www.kimo.fr

120 ISO 9001

EXPORT DEPARTMENT Tel: + 33. 1. 60. 06. 69. 25 - Fax: + 33. 1. 60. 06. 69. 29 e-mail: export@kimo.fr

Distributed by :